



Specifications

Product Name: Polly

Model: SHA171

Description: Kettle

Rated Voltage: 220-240V

Power: 1850W-2200W

Capacity: 1.7L

Important notes and safety instructions

- This kettle is designed to be used in household and other similar applications such as
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
- This kettle must only be used with the base plate provided.
- Uncoil the supply cord from the base before using the kettle
- Please ensure that the base plate is kept dry. If necessary wipe the kettle dry after filling prior to placing on the base plate.
- Do not switch kettle on if the water level is below the MIN mark on the inside of the kettle.
- If the kettle is accidentally switched on with insufficient water, the safety cutoff device will cut off power to the kettle. It may be necessary to wait a short time for the safety cut off to reset before being able to operate the kettle. Refill before trying to operate again.
- Do not place the kettle or baseplate on hot surfaces (eg cooktops).
- Do not immerse the kettle or baseplate in water.
- Unplug when not in use.
- Keep the power cord away from hot parts of the kettle and steam.
- Keep the kettle baseplate and cord out of reach of children.
- This kettle is not intended for use by persons (including young children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep out of reach of children, or ensure that they are supervised and do not play with the appliance.
- While boiling or after boiling, be cautious when opening the lid to avoid contact the steam.
- Pour the boiled water gently to avoid splashing and burns.
- The kettle is for indoor use only.
- Do not overfill the kettle as it might spill out when boiling.

Warning

Please handle the kettle with care and avoid spillage on the base or any connections. After boiling, use extra care to avoid potential injury such as burns from misuse.

After boiling, the steam inside the kettle is very hot. Do not remove the lid while the water is boiling or just after boiling. If refilling while hot, lift the lid and position it so that the hot steam is directed away from your hand and the kettle handle.

Do not overfill the kettle, as this may cause water to be ejected. Do not operate the kettle without the lid fitted.



Identification

- | | |
|------------------------|------------------|
| 1. Spout | 6. Handle |
| 2. Lid actuator button | 7. LED indicator |
| 3. Lid | 8. Cord entry |
| 4. Control panel | 9. Base |
| 5. Kettle body | |

LED temperature ranges



If the supply cord of the kettle base plate is damaged, it must only be replaced by a qualified technician.

This kettle is designed for indoor use only.

Always operate the kettle on a flat, stable surface. Do not move the kettle while the kettle is switched on.

Device operation

Your Polly kettle will remember your last used temperature and mode. To revert to a standard boiling mode, press the temperature control button until all control panel indicator lights are off.

Boil water: With all indicator lights off, press the power button to start boiling.

Direct heating: Heats water up to the selected temperature. To activate direct heating mode, first use the temperature control button to select your desired temperature, then press the power button to start heating. NOTE: Water will not be boiled under this setting. Temperature will be maintained for 30 minutes after heating.

Boil then cool: Boils water before cooling down to the selected temperature. To activate boil then cool mode, first press the power button to start the kettle in boil water mode. While the water is being heated, use the temperature control button to select the desired cool down temperature. NOTE: After boiling, a 30 minute keep warm timer will be started and the kettle will allow the water to drop to the selected temperature.

You can access more options in the Mercator Ikuu app.



Care & Cleaning

- Ensure that kettle is unplugged prior to attempting any cleaning.
- Do not immerse the kettle or stand in water for cleaning.
- Clean the exterior using a damp cloth. Do not use abrasives cleaning products or scourers to avoid scratch marks. If the kettle surface is in contact with food, use a soft cloth and a mild detergent to clean.
- After continued use, deposits from the water may settle at the base of the kettle. These should be removed periodically with a suitable descaler.
- Do not immerse any part of the kettle or base plate in water when cleaning.
- Allow the kettle to cool before cleaning.
- Do not allow the connection at the centre of the base plate or kettle bottom to become wet during cleaning



For all Sales & Warranty enquiries

Mercator (ACN 005 946 958)
 Caribbean Park, 36 Lakeview Drive, Scoresby, Victoria 3179
 Post Office Box 2596, Rowville, Victoria 3178
 For sales and product information telephone
 Customer Service: 1300 552 255



The packaging material is recyclable.
 Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

Mercator Warranty

Mercator guarantees this product against defects of materials and workmanship for a period of 36 months from the date of purchase provided the product is used for its proper purpose, in accordance with Mercator's recommendations and within such voltage and current limits as are specified by Mercator in relation to the product. Mercator will at its own option and cost make good, or replace this product with the same or similar product and return it to you, or provide a credit for any product manufactured or supplied by it, which proves to be defective within the limits set out above provided that no repairs, alterations or modifications to the product have been undertaken or attempted by anyone, other than Mercator or its authorized agents. Should you wish to make a claim under this guarantee, the product and proof of purchase must be returned pre-paid by you to the place of purchase.

This guarantee is in addition to and does not take away from any other rights and remedies you may have under any relevant law.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Please retain your proof of purchase for all warranty claims.

© This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Mercator Australia Pty Ltd (A.C.N. 009 322 105).